



Basic Measuring guide and tips for your Angled Bay Windows


This article refers to Angled Bays only.

When measuring up for a bay window you need to take into account the angles the spacing from the window and making sure your measurements are accurate and precise so that all the blinds fit in the way you would like them to, making sure to follow our instructions closely to ensure a great finish.


1. You will need to cut out a few bracket sized pieces of card so that you can determine the spacing of the brackets and work out where to measure. You can refer to our size guide to ensure you have the right bracket template sizes to use.




2. Take a depth measurement of the handles to ensure you give yourself enough room for your blinds. Record the measurement and we recommend you add an extra 5-10mm between the handle and the back of the bracket template to ensure your blinds won't come into contact with the handles.

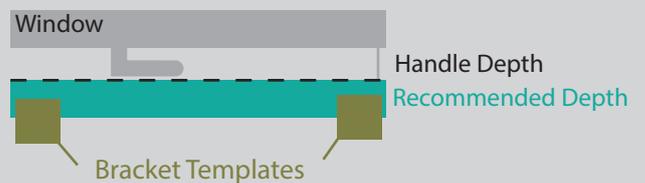

3. Now place the specifically cut out pieces of card on the window sill making sure to keep into account the depth of the handles. You have to make sure the tips of the cards touch and don't overlap.

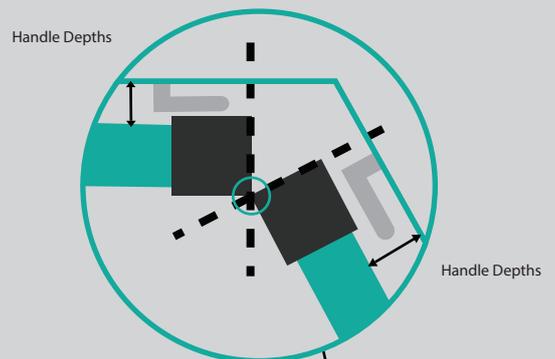

4. Place bracket templates on the sill and measure the distance from the back of each bracket template to get your recess size for each blind. Take the measurements from card to card making sure to take measurements of the drop to the sill of the window.

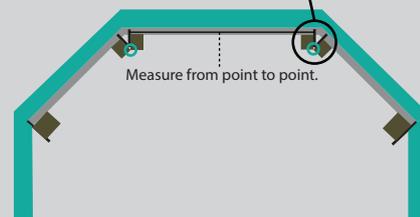

5. Repeat the process using a pencil to mark the back of the bracket templates on the ceiling to ensure the top is not smaller than the bottom. Remember to use the smallest measurements when ordering.

Bracket Depths

Roman Blind: 50mm

35mm Wooden Venetian: 49mm

50mm Wooden Venetian: 65mm

50mm Wooden Venetian Privacy: 68mm

65mm Wooden Venetian Privacy: 81mm

26mm Roller Blind: 53mm

34mm Roller Blind: 67mm

32mm Roller Blind: 62mm

89mm Vertical Blind: 60mm

127mm Vertical Blind: 79mm

25mm Aluminium Venetian: 33mm

35/50mm Aluminium Venetian: 64mm