



## Fitting a Wooden Venetian Blind inside the recess

This article refers to inside the recess only

**1.** Before fitting your venetian blind always place the blind into the recess to check that the measurements are all correct.

**2.** Before placing up your brackets measure the window handle remember to add atleast 5-10mm clearance for the handles, Place your brackets against the wall remembering clearance for the handles, mark the bracket holes clearly.

**3.** Once you have marked everything up drill into the wall for the fixings of the bracket. Once you have drilled into the marked areas place a rawlplug in each hole.


**4.** When done you should be able to secure the bracket. Now repeat for the other side. For longer width venetians we recommend you top fix a middle bracket fix it closer to the control side so that you have more security on that side of the blind

**5.** Once all the fixings have been screwed in its time to place the blind in the brackets. When hanging your venetian blind open the bracket arms and then slot the blind in and clip the arms back in.

**6.** Now you have fitted your venetian blind just pull the single chord to test it going up and down and then test the other two chords to test the open and close of the slats. Please refer to our pelmet section for help on the final stage.

**7.** Child safety is the most important part of fitting, so check your product for the instructions on how and where to fit the device.

Child Safety design may vary please refer to our child safety device page.

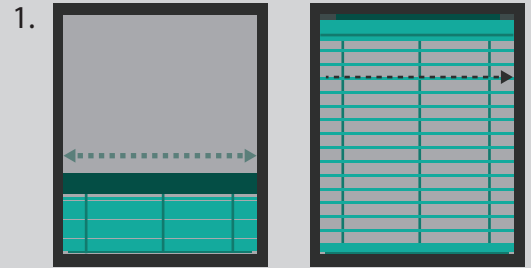

**2.** Inside the Recess

